



# 2003 Toyota Solara Tail Light Replacement

Replace a tail light on the 2003 Toyota Solara.

Written By: Melissa Spinali



## INTRODUCTION

Do you have a broken tail light? Follow this guide to learn how to check, and then replace a broken light on the 2003 Toyota Solara.

---



### PARTS:

- [Sylvania 3157 Long Life Miniature Bulb](#) (1)
-

## Step 1 — Tail Light



- Park the vehicle and turn off the engine.
- Step on the brake pedal and confirm that the tail light is unresponsive.

## Step 2



- Reach beneath the steering wheel to the left and remove the fuse box cover.




### Step 3



- Reference the fuse box guide on the back of the cover.
- Find the fuse number that corresponds to the tail light (2nd column, last row).
- Proceed to replace the tail lamp if the fuse is still functional.

## Step 4

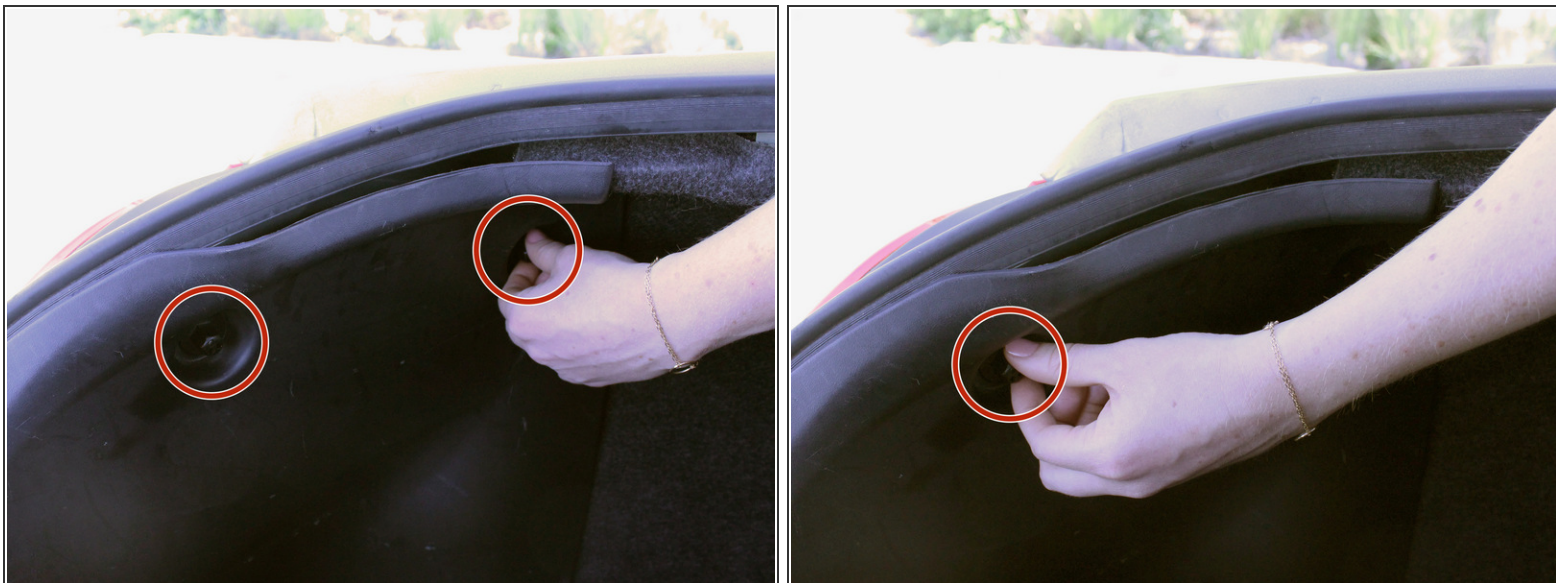

- Go to the vehicle's trunk.
- Unscrew the plastic fastenings located inside the trunk.
- Detach the panel that covers the tail light.


## Step 5



- Untwist the wired socket to expose the lamp bulb.
- Check the bulb for discoloration (if it is clouded, replace the bulb).



## Step 6

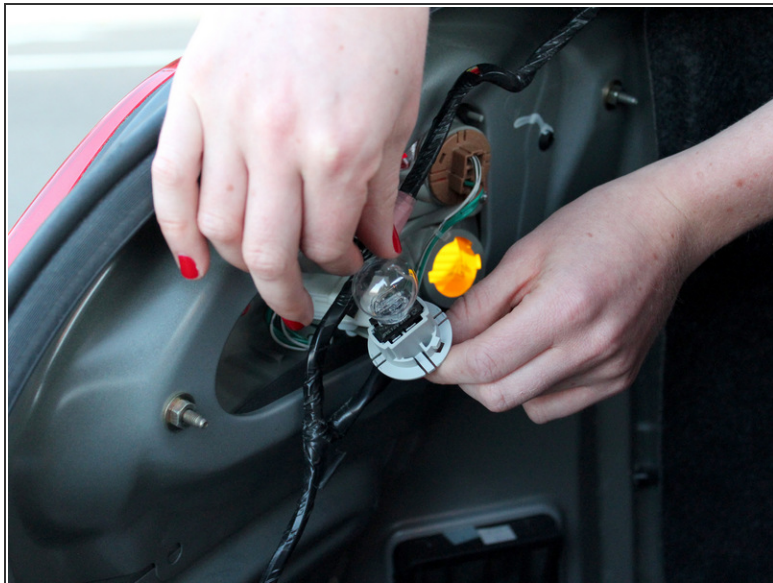

- Insert the new bulb into the socket.
- Push until there is an audible "click".

To reassemble the tail lamp, follow these instructions in reverse order.

This document was last generated on 2017-09-30 10:51:02 AM.